


Hanger Kits

for HELIAX® Elliptical Waveguide and Coaxial Cable






Add Support Bracket

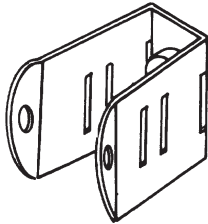

Open the hanger and attach it to an adaptor or a tower member as shown in the examples below.

Recommended Hanger Spacing

Waveguide	Gap (G)	Spacing (S)
EW/EWP180/240	1/4" (6.35 mm)	20 in (508 mm)
EW/EWP220	—	20 in (508 mm)
Cable	Gap (G)	Spacing (S)
HJ/HT/LDF4	—	30 in (762 mm)
EFX2-50	—	30 in (762 mm)
FSJ2-50	—	30 in (762 mm)
LDF2-50	—	30 in (762 mm)

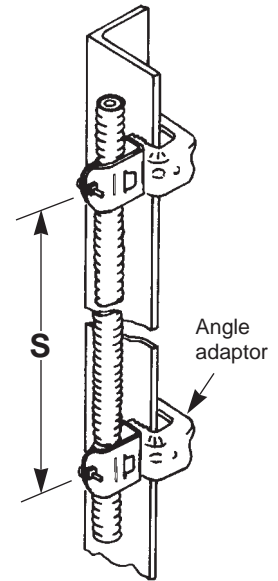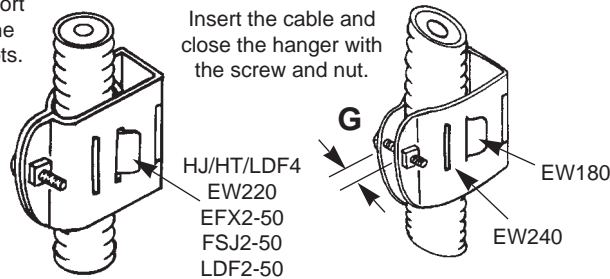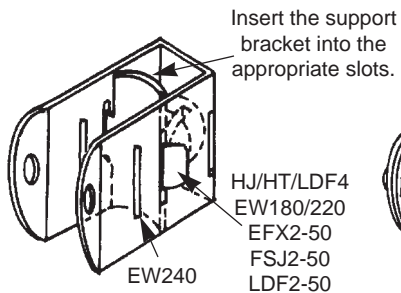

Attaching Hangers

